


Low Profile Underground Tank Installation Instructions

For septic installations, it is important to contact your local or state sanitarian regarding approved installation procedures. Refer to SITE SELECTION/PREPARATION located on the Snyder or Norwesco website.

• Water runoff caused by sloping terrain, adjacent structures, or paved surfaces can be problematic if the site selection and installation are not managed properly. Refer to SITE SELECTION/PREPARATION located on our website on the proper methods of managing these issues. Failure to locate the tank site property in areas of water runoff caused by sloping terrain, adjacent structures or paved surfaces, and/or not managing the installation property can void the warranty.

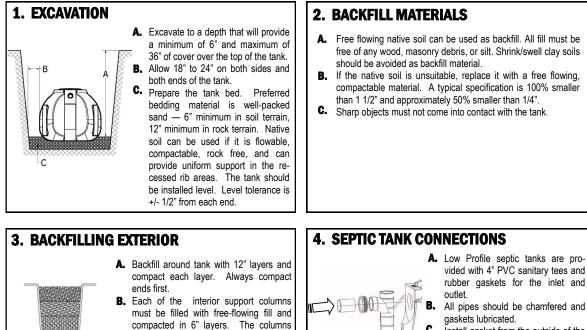

- C. Install gasket from the outside of the tank as shown in the diagram. From outside of the tank, push the pipe into the gasket. D.
- Inlet and outlet piping should be solvent welded to sanitary tees. E.
 - Note the direction of flow. The outlet is lower than inlet and all tanks are marked accordingly.

6. CISTERN / PUMP TANK INSTRUCTIONS

- B.
- A. Install bulkhead fittings at the flat areas located on either end of the tank
 - All tanks must be vented including each tank in an interconnected series.
 - The vent pipe should be the same diameter as the outlet pipe.
 - When multiple tanks are installed in series, you must maintain at least 36" of separation between tanks.
 - Flexible connections are required between each tank on interconnected tank installations.



- must have the soil compacted to provide structural support. See diagram.
- C. Be sure to compact soil under inlet and outlet piping.
- D. Maximum backfill over the top of the tank is 36".
- E. Mound soil over the top of the tank to direct surface water away from the tank.

5. MANHOLE EXTENSIONS

- Install manhole extensions and/or lid risers before you backfill. R Manhole extensions are supplied
- with gaskets and screws.
- C. Install screws as shown in the diagram around the circumference of the base of the extension.
- D, Be sure that the self-tapping screws seat squarely into the tank. Do not over-tighten screws.

06/15

This document contains proprietary information. It is intended solely for the information and use of potential clients involved or to be involved in a transaction with BARR Plastics. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the expressed written permission.





CAUTION

Failure to comply with the points below voids warranty.

- A. Tanks are not fire-resistant. Do not store them near an open flame or heat in excess of 180 °F.
- B. Do not install any tank under the path of vehicles or heavy equipment.
- **C.** Do not leave Low Profile septic tanks empty for extended periods of time.
- **D.** Low Profile septic tanks and cisterns are designed only for use as underground tanks.
- **E.** Low Profile septic tanks and Low Profile cisterns may be used as holding tanks or for pumping applications where permitted by local codes.
- **F.** Low Profile natural colored cisterns are made of resins that meet FDA specifications for the storage of drinking water and can be used for that application.
- **G.** Protect the tank from sharp objects which could puncture it and cause leakage.
- **H.** Where saturated soil or seasonal high water tables are indicated between the bottom of the tank and the ground surface, see separate Supplemental Installation Instructions on our website.
- I. For installations requiring counter-buoyancy measures; please refer to Counter-Buoyancy Instructions on our website.
- J. Maximum temperature of liquid entering tank is 120° F.
- K. Maximum bulkhead fitting size is 4".

It is not advised to use this plastic underground tank for any application other than typical household sewage. Such uses would void product warranty.

WARRANTY

Manufacturer warrants that if this part is proven to be defective in material or workmanship within five (5) years from the date of manufacture, manufacturer will (at company's option) either replace or repair said part. This standard limited warranty does not apply to damages resulting from misuse, improper application of recommended materials, accident, or improper installation or maintenance. Remedy to the buyer is limited to the replacement of any defective product (or its component where applicable), F.O.B. point of manufacture. The buyer's remedy under this warranty does not include any other direct or indirect consequential damages which result from defects in material and/or workmanship of its products.